


# ALTERED AWD

## Installation Guide Dead Pedal Replace for 2020+ Outback




Remove your stock dead pedal. Pull with some force from the top, while placing your other hand on the carpeting to hold it in place. There is adhesive attaching the pedal to the carpet as well as two fasteners that will simply just pull out.


### Countersunk Washer

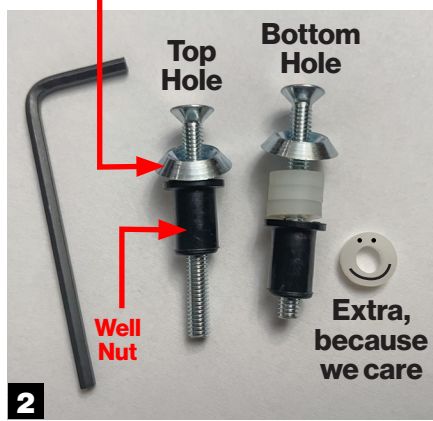

This is the hardware that is supplied for the installation. The 2.5mm hex key is included.

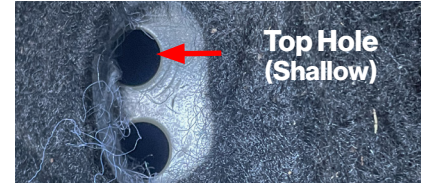

For the holes that the pedal mounts into, it is worth noting the top one is shallow and the bottom one, because of how the carpet is installed, is rather deep. This is why you have the white washers.

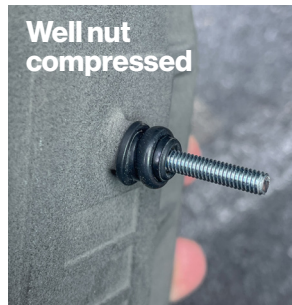

For installing the hardware, the countersunk washer is inserted on the screw, before inserting into the dead pedal. The washers and rubber well nuts are installed as shown above. When installed, the well nut secures the pedal when it is compressed from the screw being tightened, as shown above.



Congratulations! You're on the final step, simply align the screws as shown and insert them into the top and bottom holes, making sure the well nuts also full seat themselves and use the supplied 2.5mm hex key to tighten them down.

**\*\*Note\*\* when tightening the screws during installation, ensure you press the pedal toward the carpet and the hex key into the screw with adequate pressure to ensure the well nut seats itself on the metal hole, so it doesn't spin freely and the nut inside compresses it to secure it in place.**