





# INSTALLATION GUIDE

## MagDash for AuxBeam 8 bank, 6 bank, & AR Series Outback 2020+ (Wilderness included)


Installing your MagDash mount takes about 20-30 minutes.

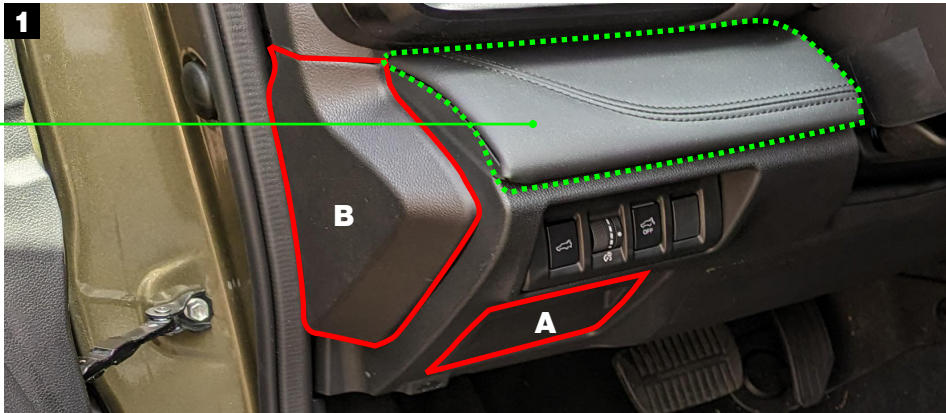


1 A) Remove the fuse cover and poke your finger or a flat head through towards the panel (B) to pop it loose from the clips.

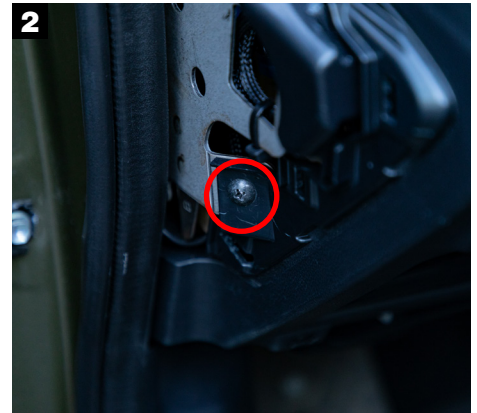

2 Use a Philips head screwdriver to remove this screw.

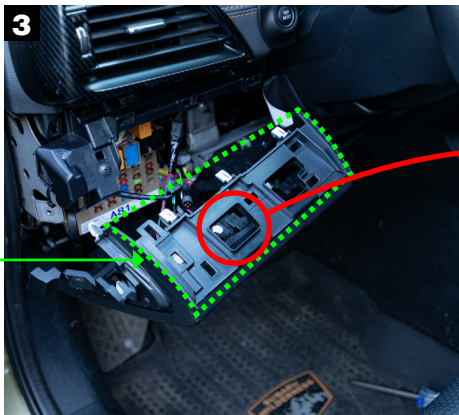


3 Pull out (unclip) the dash panel and then remove the cover (denoted in green dashed line).

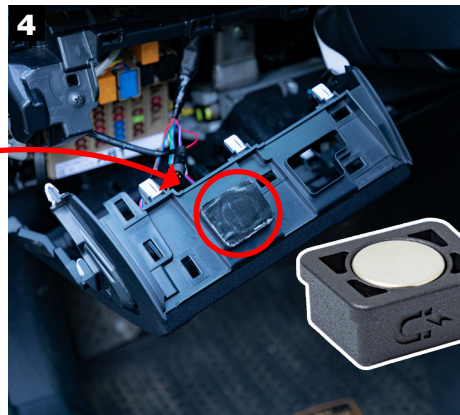

4 On the dash panel, in the opening on the left, insert your magnet pod and firmly press it in place.



5 Replace the trim panel, clipping it back in and set the MagDash mount onto it. It will magnetically attach, so you can then connect your cable for the AuxBeam panel.

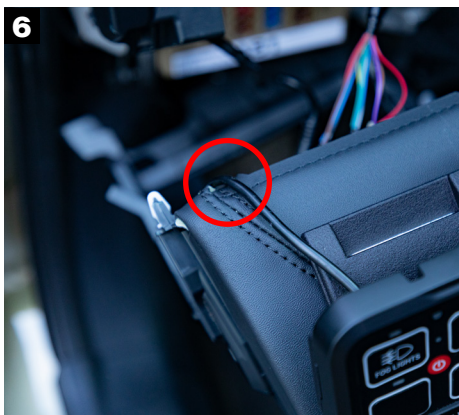

6 Run your AuxBeam cable along this indentation on the trim panel.



7 Reinsert the dash panel into its clips, firmly pressing it in place. Screw back in the Philips head screw (red circle).



8 Finish the install by closing up the trim panel on the left side and reinserting the fuse panel cover from step 1.